


1	HR 1505	-8 SAE M x -6 JIC M	4
2	HR 4628	14' HOSE, CRIMP 1 END	6
3	HR 4716	1/4 NPT M x -6 JIC M ADAPTER	6
4	HR 4717	1/4 NPT M x -6 JIC F ADAPTER	2
5	HR 4681	-6 SAE M x -6 JIC M 90° ELL	1
6	HR 4682	-6 SAE M x -6 JIC M ADAPTER	2
7	HR 4683	-6 JIC M x -6 JIC F 90° ELL	6
8	HR 4684	-6 x -6 x -6 JIC TEE	1
11	HR 4718	FLOW CONTROLS	2
12	H 7040-1	FLOW DIVIDER/COMBINER	1
13	HR 4719	16" STROKE HYDRAULIC CYLS.	2
14	HR 4542	COVER CONTROL VALVE-2 SPOOL	1
15	HR 2055-1	FLOW DIVERTER	1
16	HR 2021	-8 SAE M x -8 JIC M ELL	1
17	HR 4720	-8 HOSE x 8' L. CRIMP 1 END	2
18	HR 4721	REUSEABLE FITTING FOR -8 HOSE	2
19	HR 4685	REUSEABLE FITTING FOR -4 HOSE	6
20	HR 4722	1/2 NPT M x -8 JIC M ADAPTER	3
21	HR 4562 A	-4 HOSE x 9' L, CRIMP 2 ENDS	1
22	HR 4563	-4 HOSE x 6' L, CRIMP 2 ENDS	1
23	H 7048	3/8 NPT x -6 JIC M 90° ELL	2
24	HR 4520	GANTRY CYL. 36 " STROKE	1
26	HR 2057	-4 SAE M PLUG	1

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
-	-	-	-

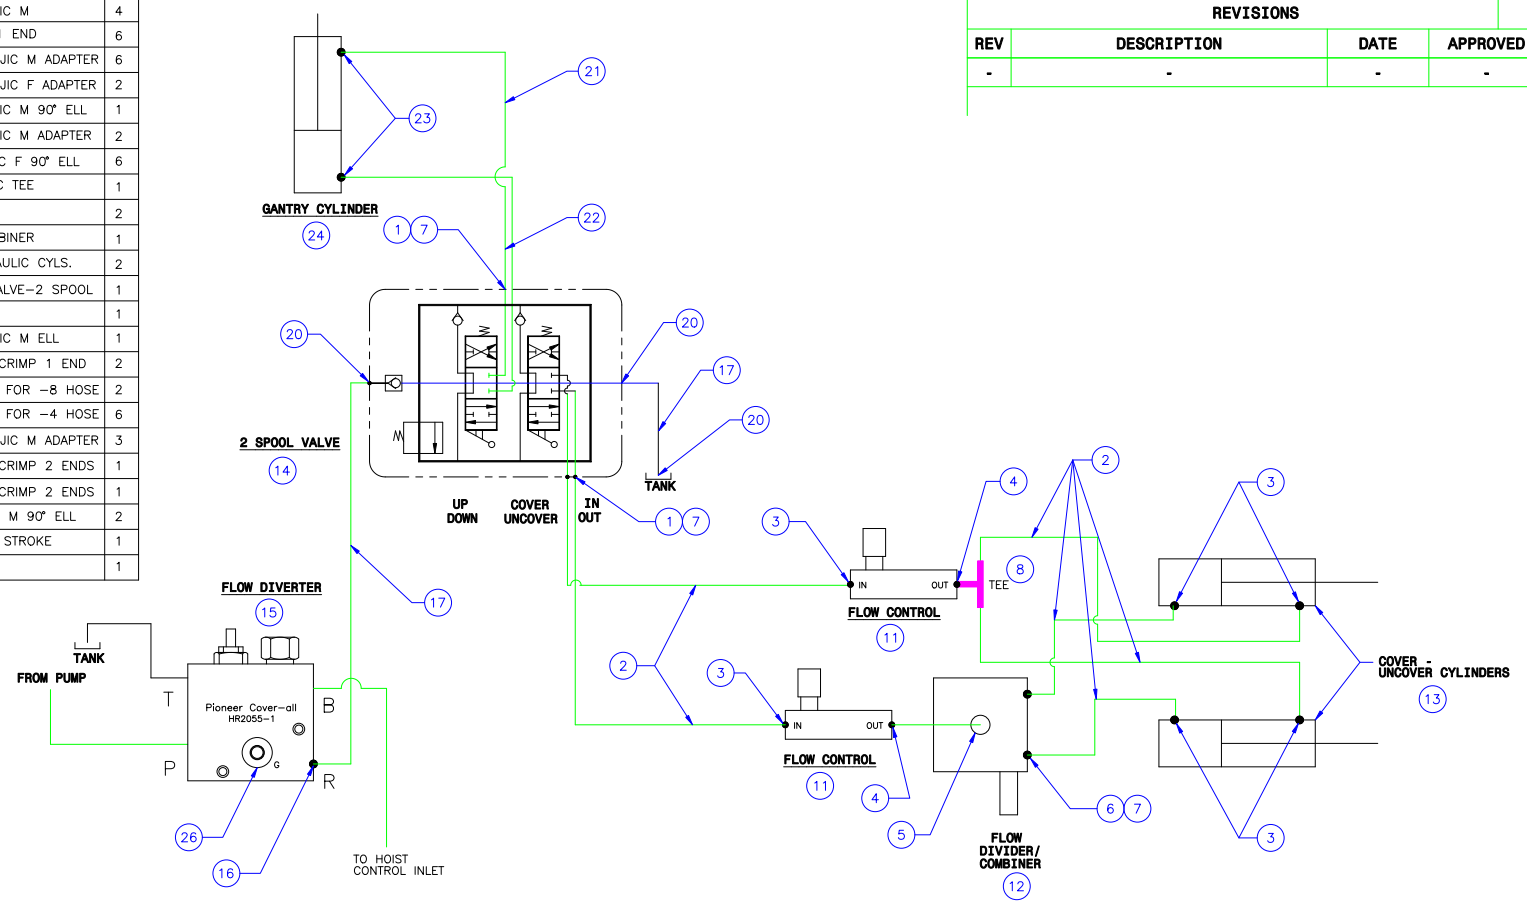

NOTE 2:

MANIFOLD IS SUPPLIED WITH INTERNAL PLUG PACKAGED SEPARATELY, AND THE "T" PORT PLUGGED (NO RETURN LINE BACK TO TANK). FOR MAXIMUM SYSTEM PROTECTION, PIONEER RECOMMENDS THAT THE RETURN LINE BACK TO TANK BE UTILIZED. APPLICATIONS WHERE FLOW RATES GREATER THAN 30 G.P.M. EXIST, THE RETURN LINE BACK TO TANK MUST BE EMPLOYED. TO INSTALL THE LINE BACK TO TANK:

- 1) REMOVE THE DIVERTER VALVE.
- 2) INSTALL THE INTERNAL PLUG THROUGH THE "B" PORT.
- 3) REPLACE THE "T" PLUG WITH #16 SAE ADAPTER.
- 4) REPLACE THE DIVERTER VALVE.

NOTE 1:

SCHEMATIC SHOWN WITH RECOMMENDED, PRV RETURN LINE BACK TO TANK. PRV BACK TO TANK MUST BE USED FOR APPLICATIONS WHERE FLOW RATES GREATER THAN 30 G.P.M. EXIST, OPTIONAL FOR LESSER FLOW RATES. REFER TO NOTE 2 FOR CONVERSION INSTRUCTIONS.

Pioneer, A Wastequip Co.
North Oxford, MA 01537

RP SATR HYD. SCHEMATIC

PART NO.	RP SATR HYD. SCHEMATIC	DATE	
SCALE:	NONE	DRW. BY:	P.DOAN 0/0/07